




Fender set
FOR CATRIKE
2008




Planet Bike Fender Set for Catrike

PART NUMBER	PART NAME	QTY	COMMENTS
1	SYMMETRIC BRACKET	2	
2	FRONT FENDER MOUNT	2	1 LEFT, 1 RIGHT
3	M5X10 BUTTON HEAD SCREW	8	
4	M5 FLAT WASHER	22	18 FRONT, 4 FOR REAR
5	M5 NYLON LOCK NUT	10	
6	PLANET BIKE FENDER	3	2 FRONT, *REAR SOLD SEPARATELY
7	M5X12 SHCS	6	2 FOR FRONTS, 4 FOR REAR
8	AXLE MOUNT BRACKET	2	
9	WIRE FENDER STAYS	2	

FRONT FENDER ASSEMBLY

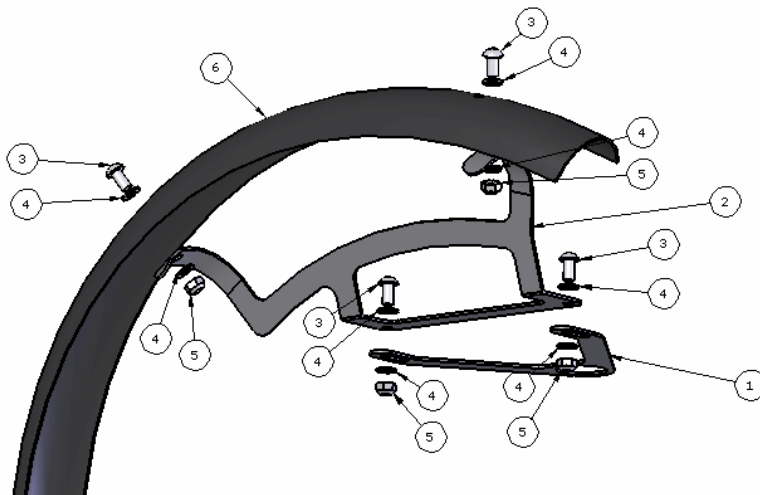

Front Fender Assembly Diagram

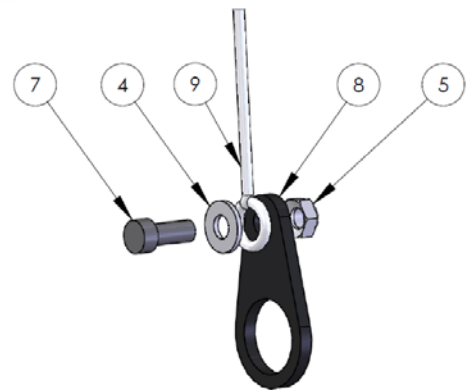

Axle Mount Bracket Assembly Diagram

1. Assemble front fenders as shown, leaving the button head screws attaching Symmetric Bracket (Part 1) and Front Fender Mount (Part 2) loose.
2. Remove the headset cap from your trike and install the fender mount on top of the handlebar, and below the headset cap.
3. Center the fender over the wheel and tighten the M5 screws left loose in step 1.





4. Assemble the Axle Mount Bracket to the Wire Stay as shown in the assembly diagram.

5. Install the Axle Mount Bracket by removing the nut on the quick release axle. Install the Bracket between the Dust Cap (conical washer) and the axle nut, with the fender stay and head of the bolt facing out.



6. Attach the fender stay close to the rear of the fender.

Repeat steps for both sides.

REAR FENDER INSTALLATION Rear Fender Sold Separately

1. Using the M5X12 SHCS (Part 7) and M5 washers (Part 4), bolt the 4 long wire fender stays provided with the fender into the holes in the top of the drop outs, two on each side.



2. Attach the fender stay clips to the fender and tighten the screws.

